



Parts Identification Guide
PIE013/0506

Belt Pullers


PB Series 6-48, 8-48, 12-36

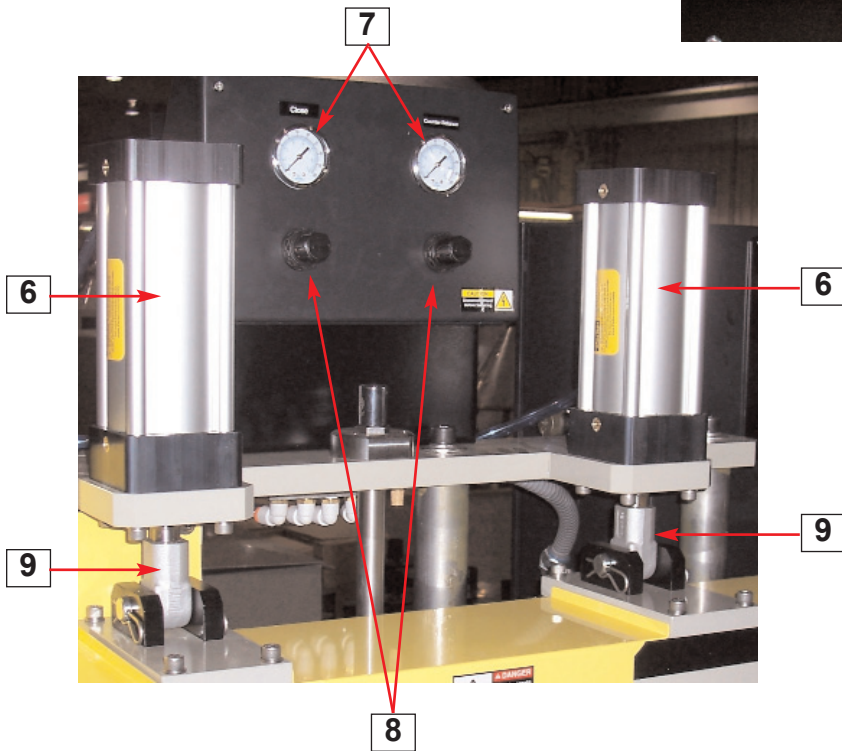

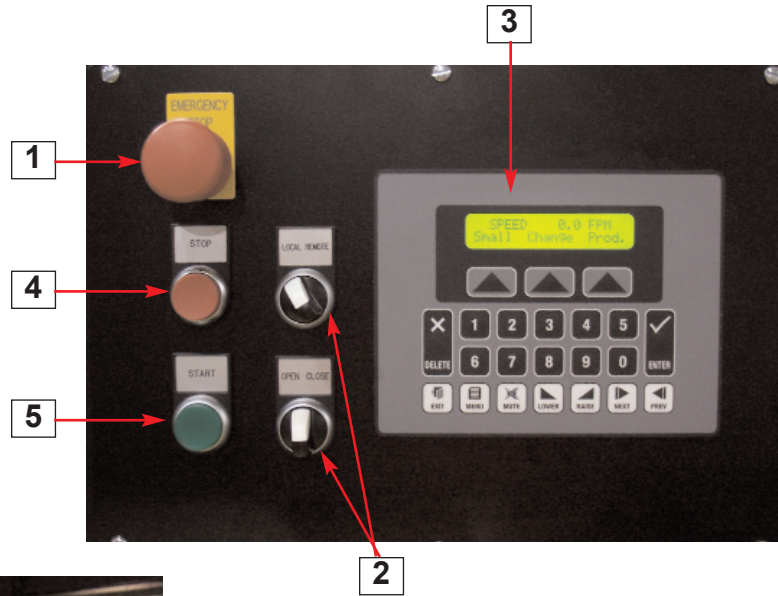



**Belt Puller
PB Series 6-48, 8-48, 12-36**

1. Emergency Stop Button
2. Selector Switch
3. Operator Interface
4. Stop Button
5. Start Button
6. Air Cylinder
7. Pressure Gauges
8. Air Regulators
9. Rod Eye

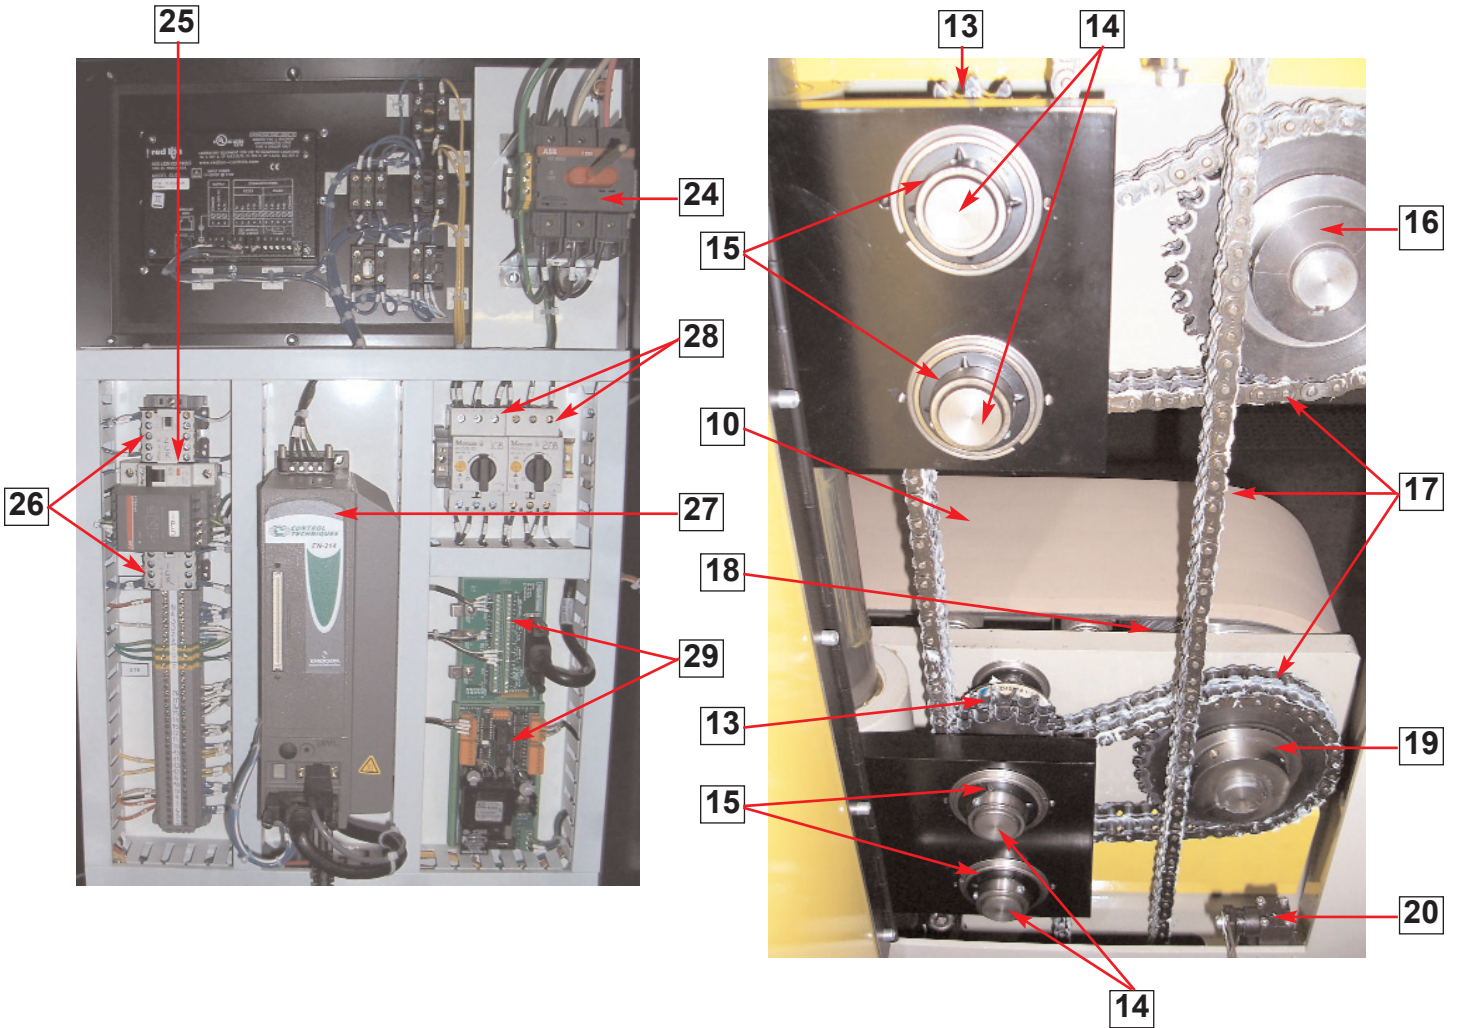




**Belt Puller
PB Series 6-48, 8-48, 12-36**

- 10. Puller Belt(s)
- 13. Idler Sprocket
- 14. Idler Shafts
- 15. Bearings
- 16. Upper Drive Sprocket
- 17. Chain 40-2
- 18. Drive Sheave
- 19. Lower Drive Sprocket
- 20. Door Safety Switch
- 24. Disconnect
- 25. Breaker(s)
- 25. Relay(s)
- 27. Drive Control
- 28. Starter(s)
- 29. Signal Splitter(s)

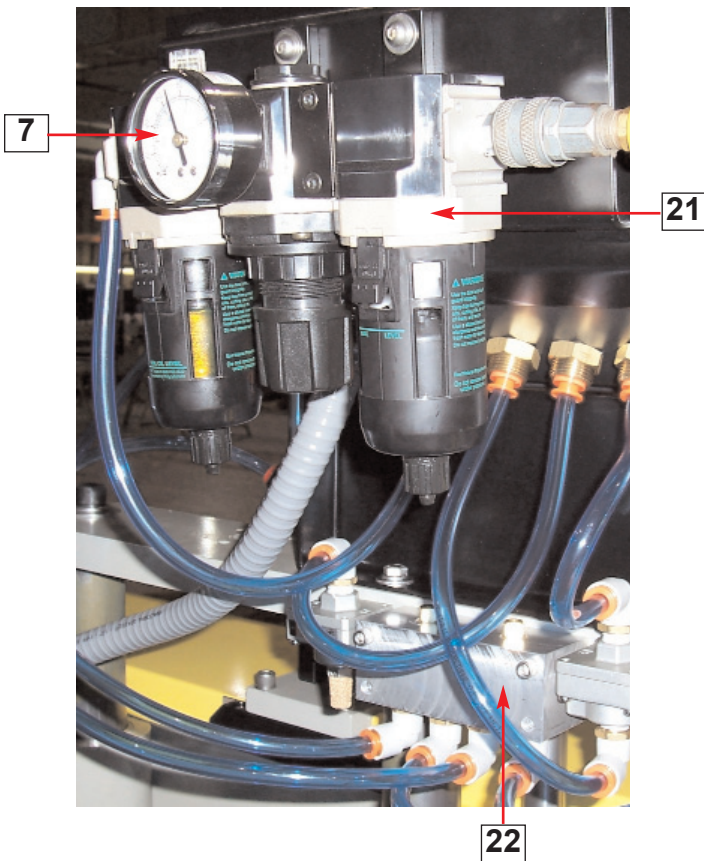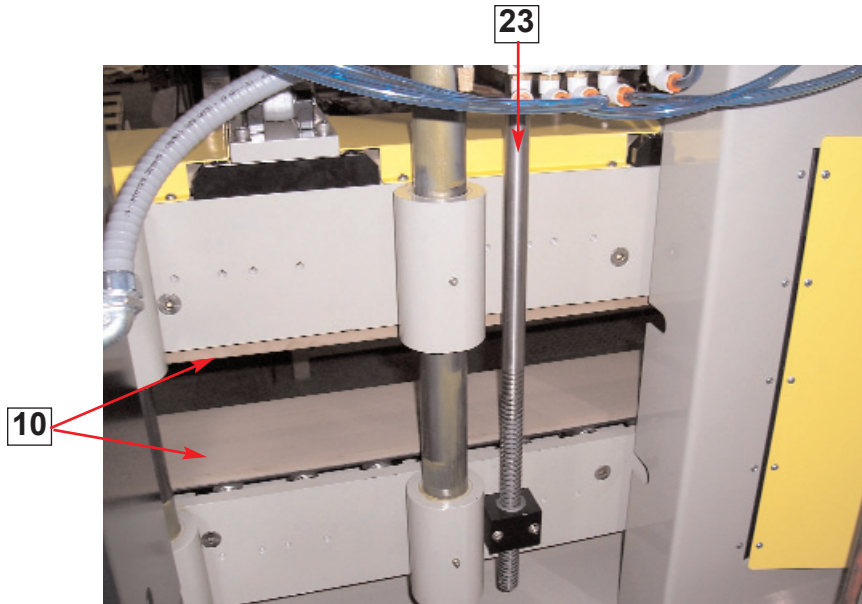

**Belt Puller
PB Series 6-48, 8-48, 12-36**

- 7. Pressure Gauge
- 10. Puller Belt(s)
- 21. Air Filter Regulator Assembly
- 22. Air Manifold
- 23. Vertical Screw Adjustment

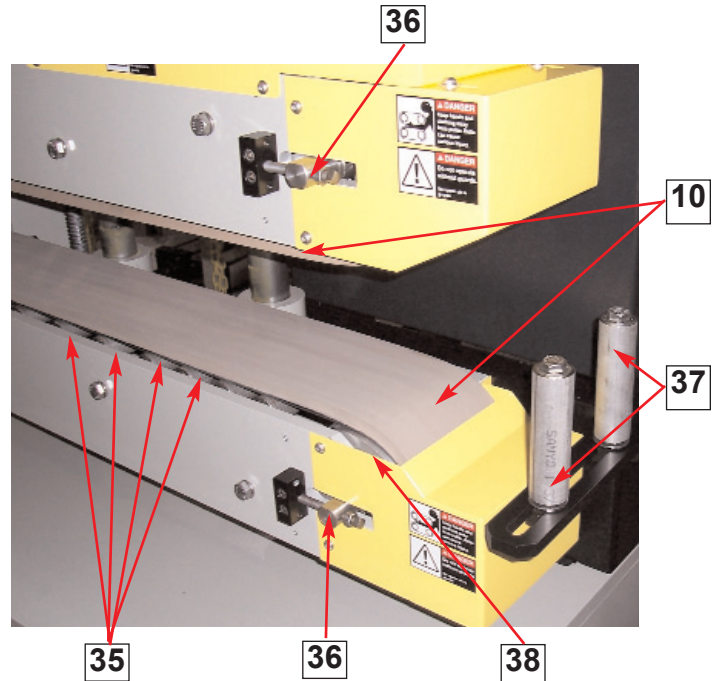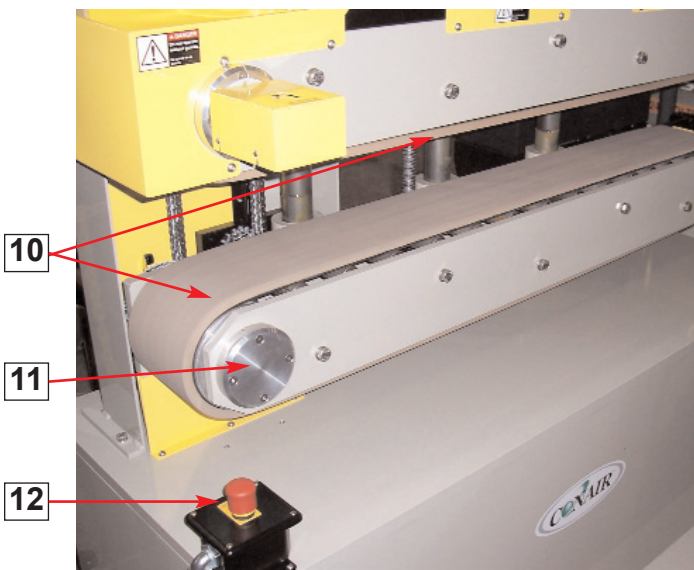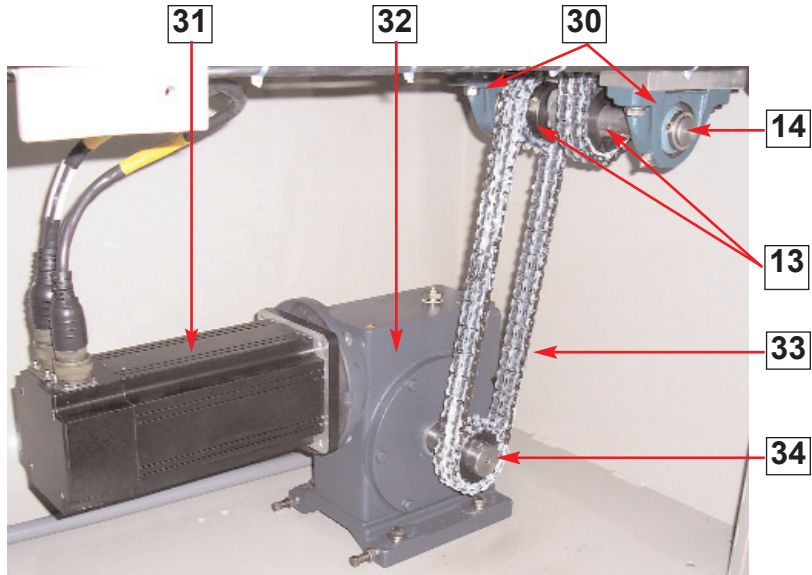

**Belt Puller
PB Series 6-48, 8-48, 12-36**

- | | |
|---------------------------|---------------------------|
| 10. Puller Belt(s) | 33. Chain 50-2 |
| 11. Bearing Cover | 34. Drive Sprocket |
| 12. Emergency Stop | 35. Support Rollers |
| 13. Idler Sprocket(s) | 36. Driven Shaft |
| 14. Idler Shaft | 37. Vertical Feed Rollers |
| 30. Pillow Block Bearings | 38. Drive Sheave |
| 31. Servo Motor | |
| 32. Gear Reducer | |