

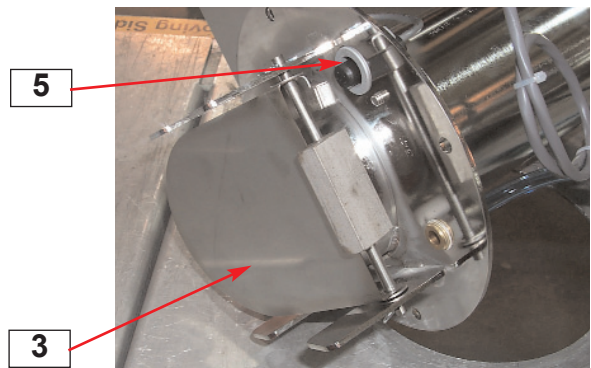
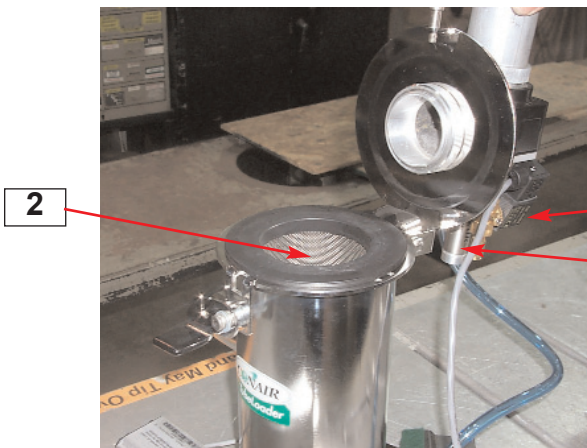


Parts Identification Guide

PIC005/0205

TLR Tube Loader

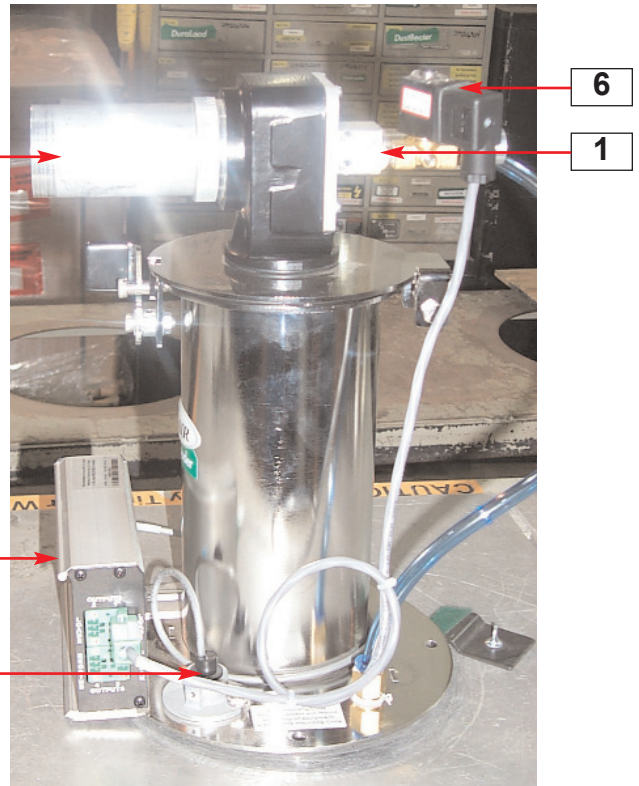

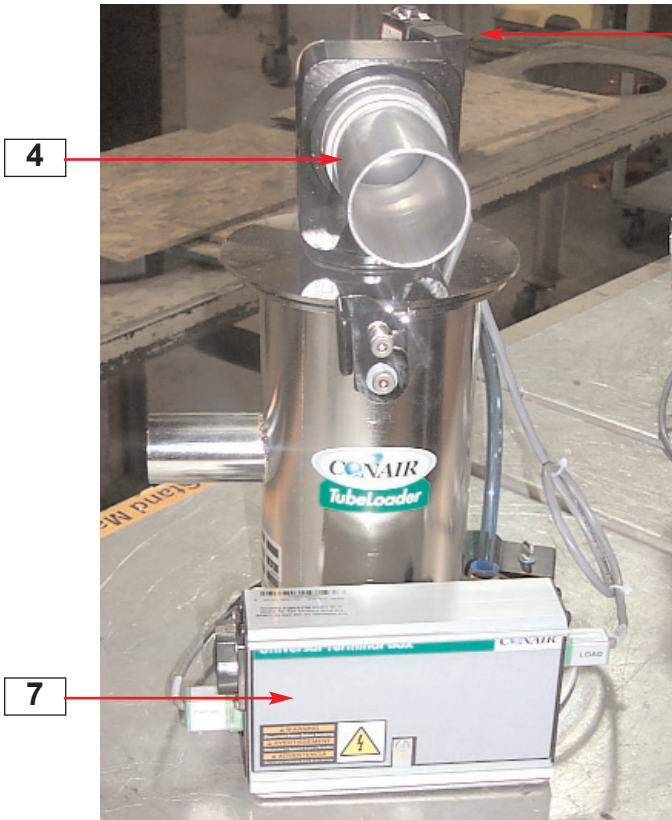

TLR

- 1. Air Cylinder
- 2. Filter
- 3. Flapper
- 4. Inlet
- 5. Sensor
- 6. Solenoid
- 7. Universal Terminal Box (UTB)